

“Direct Link”

From <https://delta-ia-tips.com/tag/direct-link/>

Downloaded on January 11, 2022 | Heavily Edited by RK

Contents

Contents	1
Communication Interface, PC to DVP (Delta PLC) May 25, 2011	2
Direct PC to PLC Communication.....	2
1. PC RS232 Port to PLC RS232 Port Using a DVPACAB2A30 Cable	
2	
2. PC USB port to PLC RS485 port using the device IFD6500	
(Delta USB-RS485 converter).	3
PC to PLC Communication via Delta’s HMI Link (Direct Link)	4
1. Direct Link function trough Standard USB wire (WPLSoft and	
ISPSoft)	4
2. Direct Link function trough Ethernet (WPLSoft and ISPSoft)	4
Updated Direct Link Function March 31, 2011	5