

# “Direct Link”

From <https://delta-ia-tips.com/tag/direct-link/>

Downloaded on January 11, 2022 | Heavily Edited by RK

---

## Contents

Contents.....	1
Communication Interface, PC to DVP (Delta PLC)   May 25, 2011 .....	2
Direct PC to PLC Communication.....	2
1. PC RS232 Port to PLC RS232 Port Using a DVPACAB2A30 Cable.....	2
2. PC USB port to PLC RS485 port using the device IFD6500 (Delta USB-RS485 converter). ....	3
PC to PLC Communication via Delta’s HMI Link (Direct Link).....	4
1. Direct Link function through Standard USB wire (WPLSoft and ISPSoft) .	4
2. Direct Link function through Ethernet (WPLSoft and ISPSoft).....	4
Updated Direct Link Function   March 31, 2011.....	5